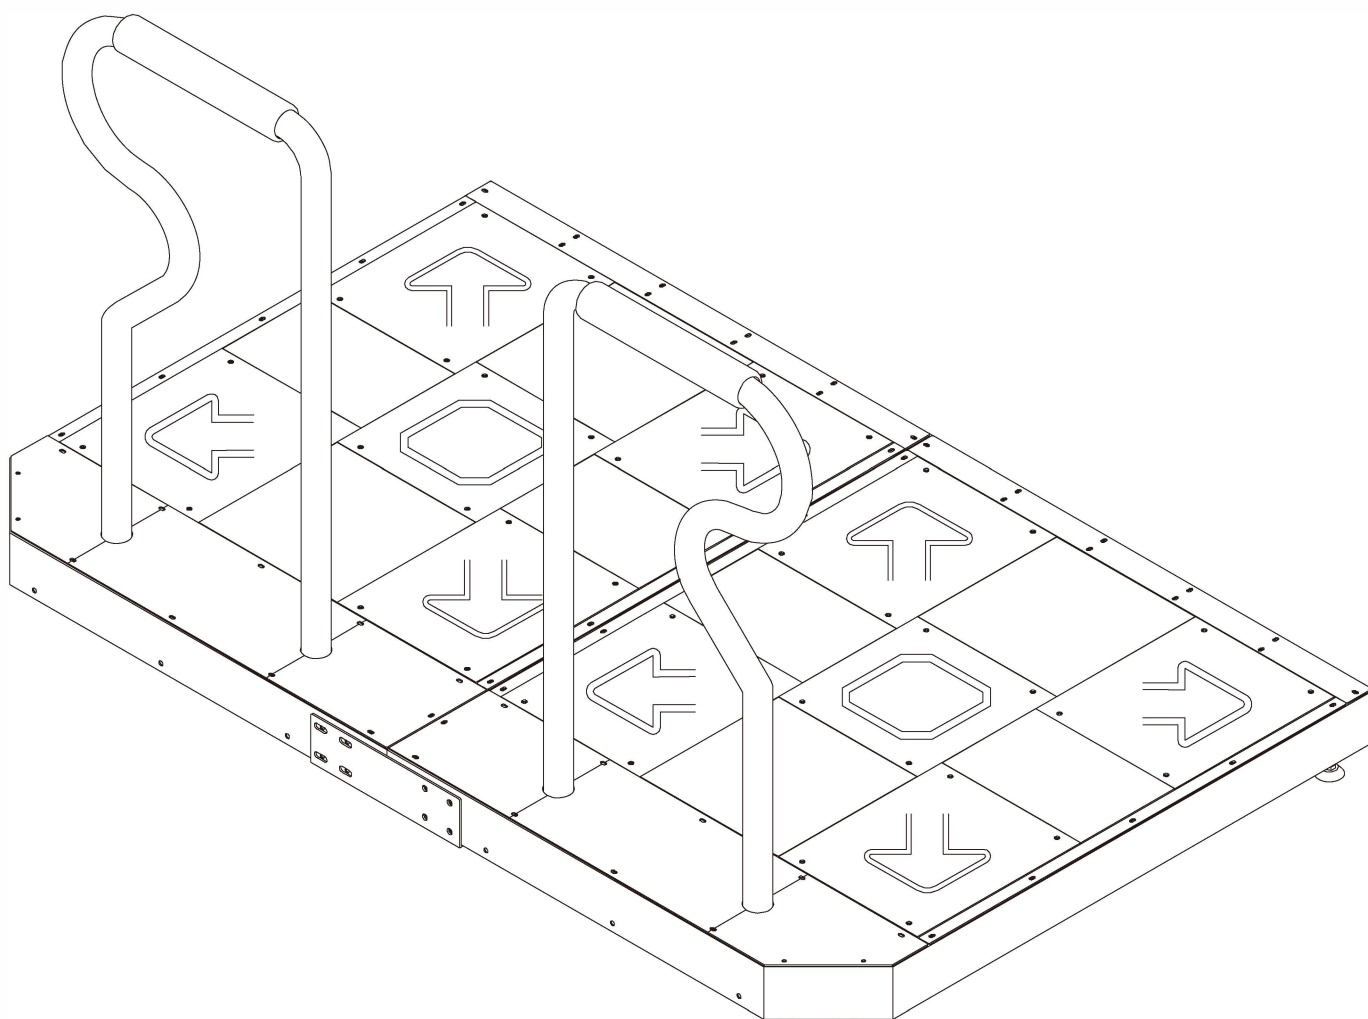



# Instruction Manual



- The specifications of this product are subject to change without notice for performance improvements or other reasons

# 1 Specifications
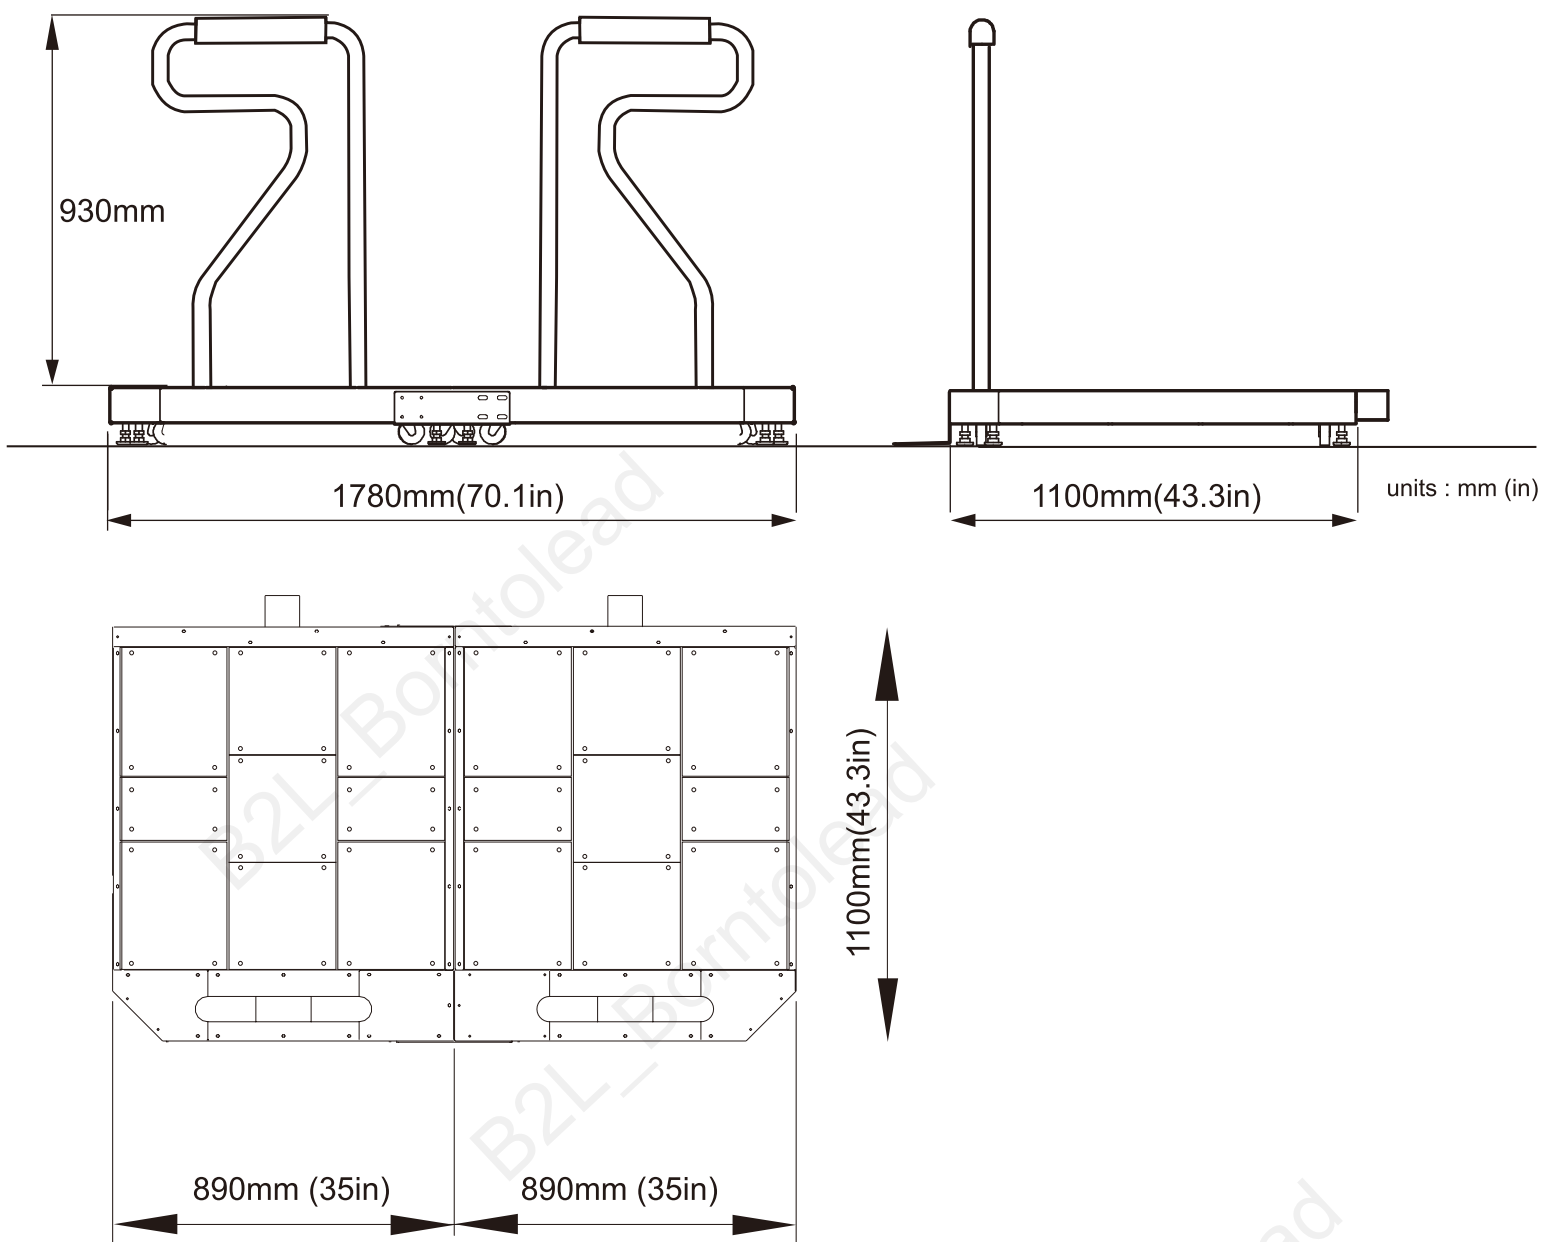
## How to connect the stage units

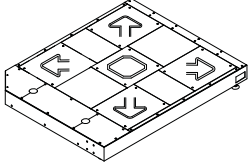
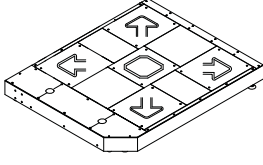
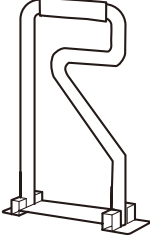
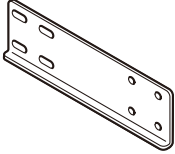
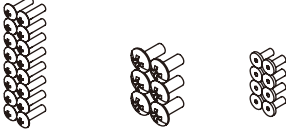
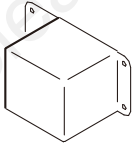
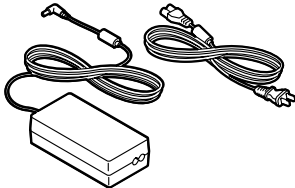
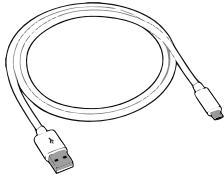
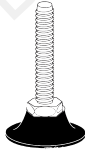


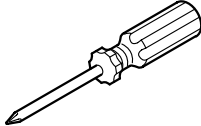

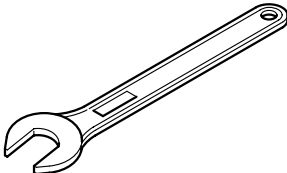


External dimensions	See the above figure
Dimensions when installed	Pad Left P1: 890mm x 1100mm x 90mm Pad Right P2: 890mm x 1100mm x 90mm Safety BAR: 930mm / Ø4.2mm
Main unit weight	Approx. 200 kg (when installed)
Conditions of Use	Ambient temperature 5~ 35°C/Ambient humidity 30~ 70% (no condensation)

- The specifications of this product are subject to change without notice for performance improvements or other reasons


# 2 Parts and accessories
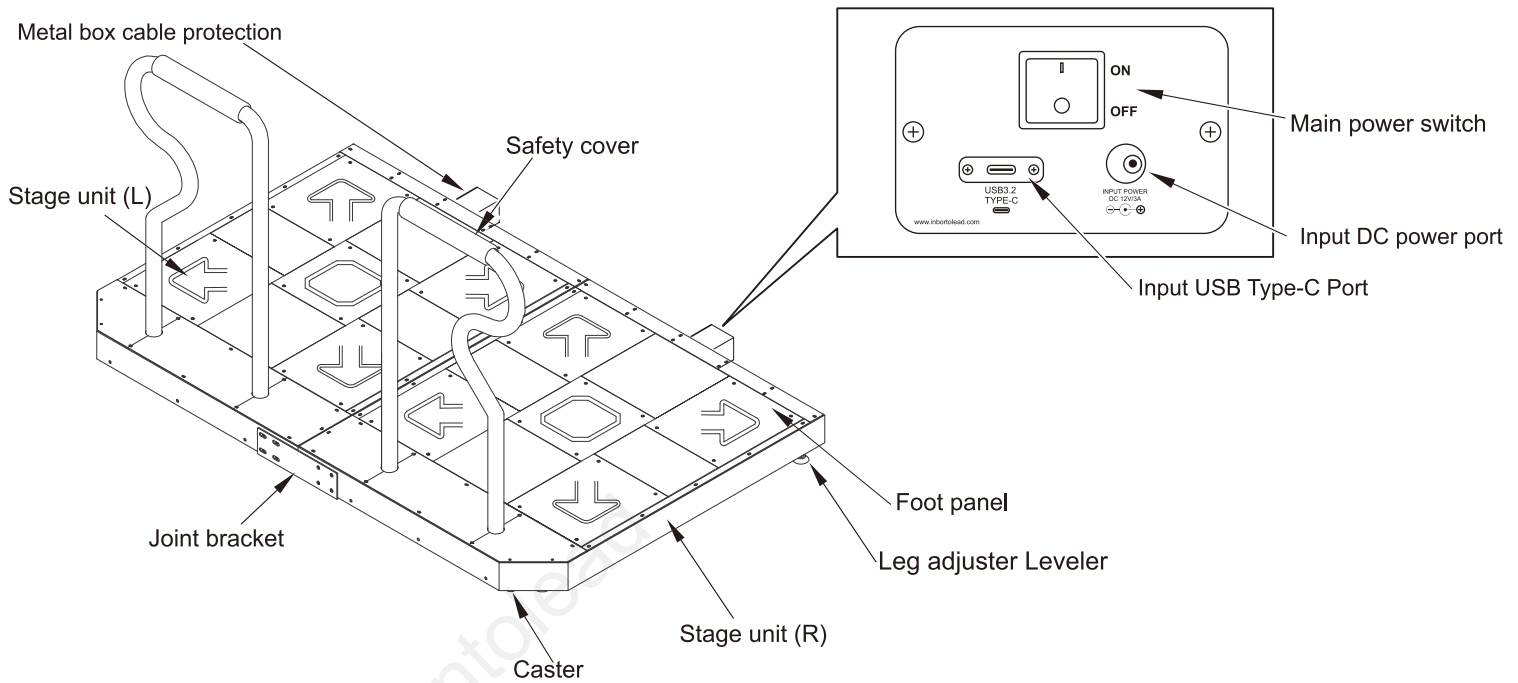
## Part list

 <p>Step unit (R)</p>	 <p>Step unit (L)</p>	 <p>Safety bar x 2</p>	 <p>Joint bracket x 2</p>
 <p>Spare screws</p>	 <p>Metal box x 2</p>	 <p>12V3A Power adapter x 2</p>	<p>Length 1.8M/6FT</p>  <p>USB3.2 Gen1 AM to CM cable x 2</p>
 <p>Leg Leveler x 8</p>	 <p>Caster x 8</p>	 <p>Hexagon Key Wrench Tool kit</p>	
 <p>Philip screwdriver X 1</p>	 <p>Protection globes X 2 pair</p>	 <p>Wrench x 1</p>	

# 3 Names of parts


## Parts of the stage units



## Parts of the stage units

<b>SEPARATE SWITCH</b>	<p>There are five cable switches on one foot panel.                  Step on each foot panel to check the reaction.                  The position of the cable switch that is detected is displayed.</p>
<b>UR</b> <b>UL</b> <b>C</b> <b>DL</b> <b>DR</b>	<ul style="list-style-type: none"> <li>• UR ..... The UP RIGHT panel switch is detected</li> <li>• UL ..... The UP LEFT panel switch is detected</li> <li>• C ..... The CENTER panel switch is detected</li> <li>• DL ..... The DOWN LEFT panel switch is detected</li> <li>• DR ..... The DOWN RIGHT panel switch is detected</li> </ul>

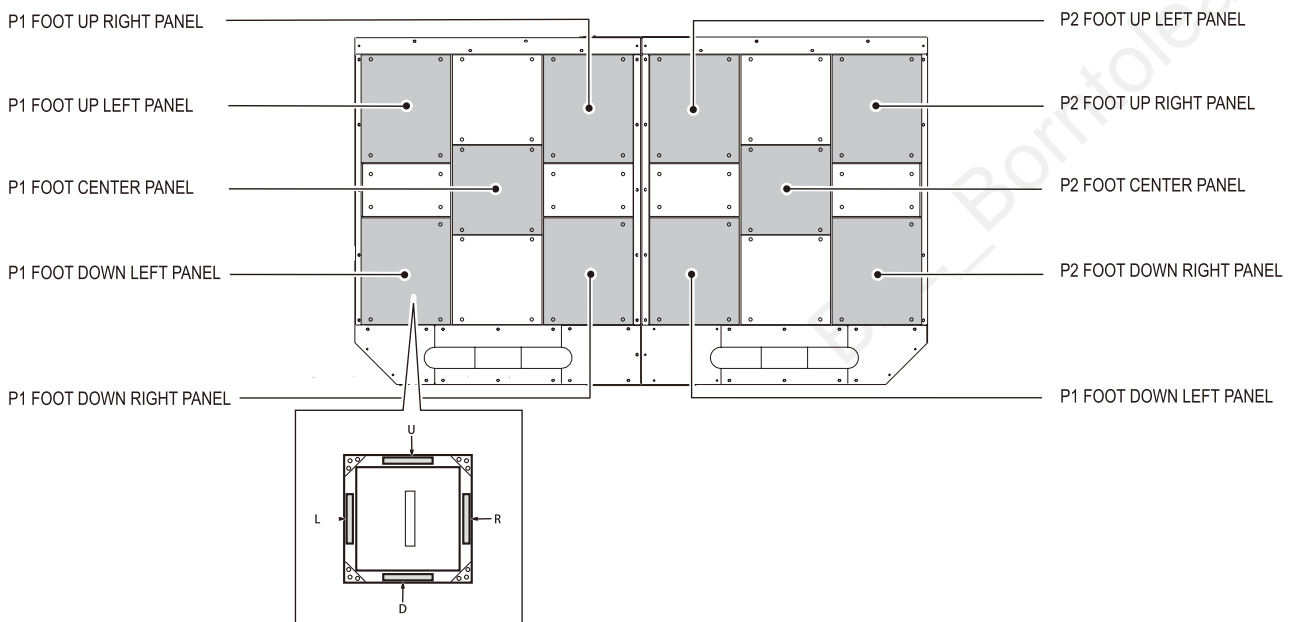
- If the cable switch reacts even though you are not stepping on the foot panel, it is possible that sand or foreign objects are in the panel. Remove them.




# 4 Installation and assembling

## How to assembly the stage units

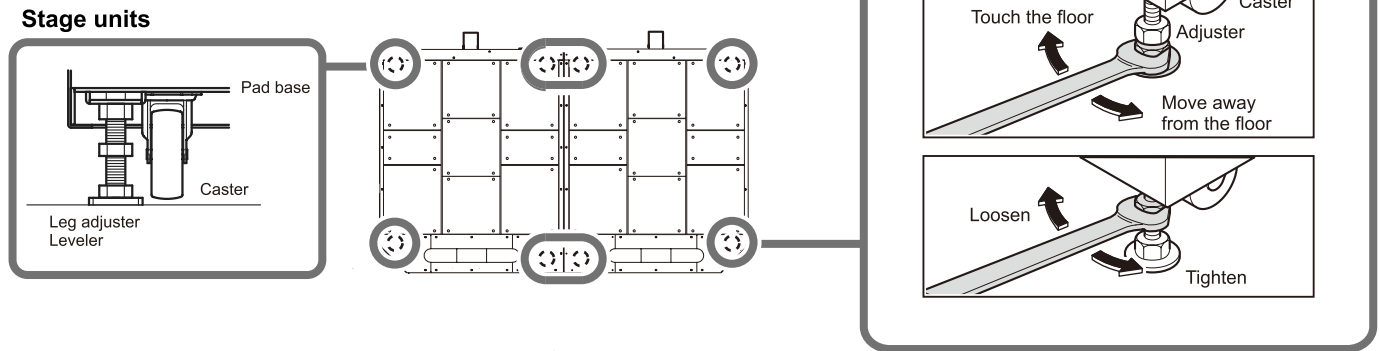- 1 Install the caster
- 2 Install the Leg adjuster Leveler



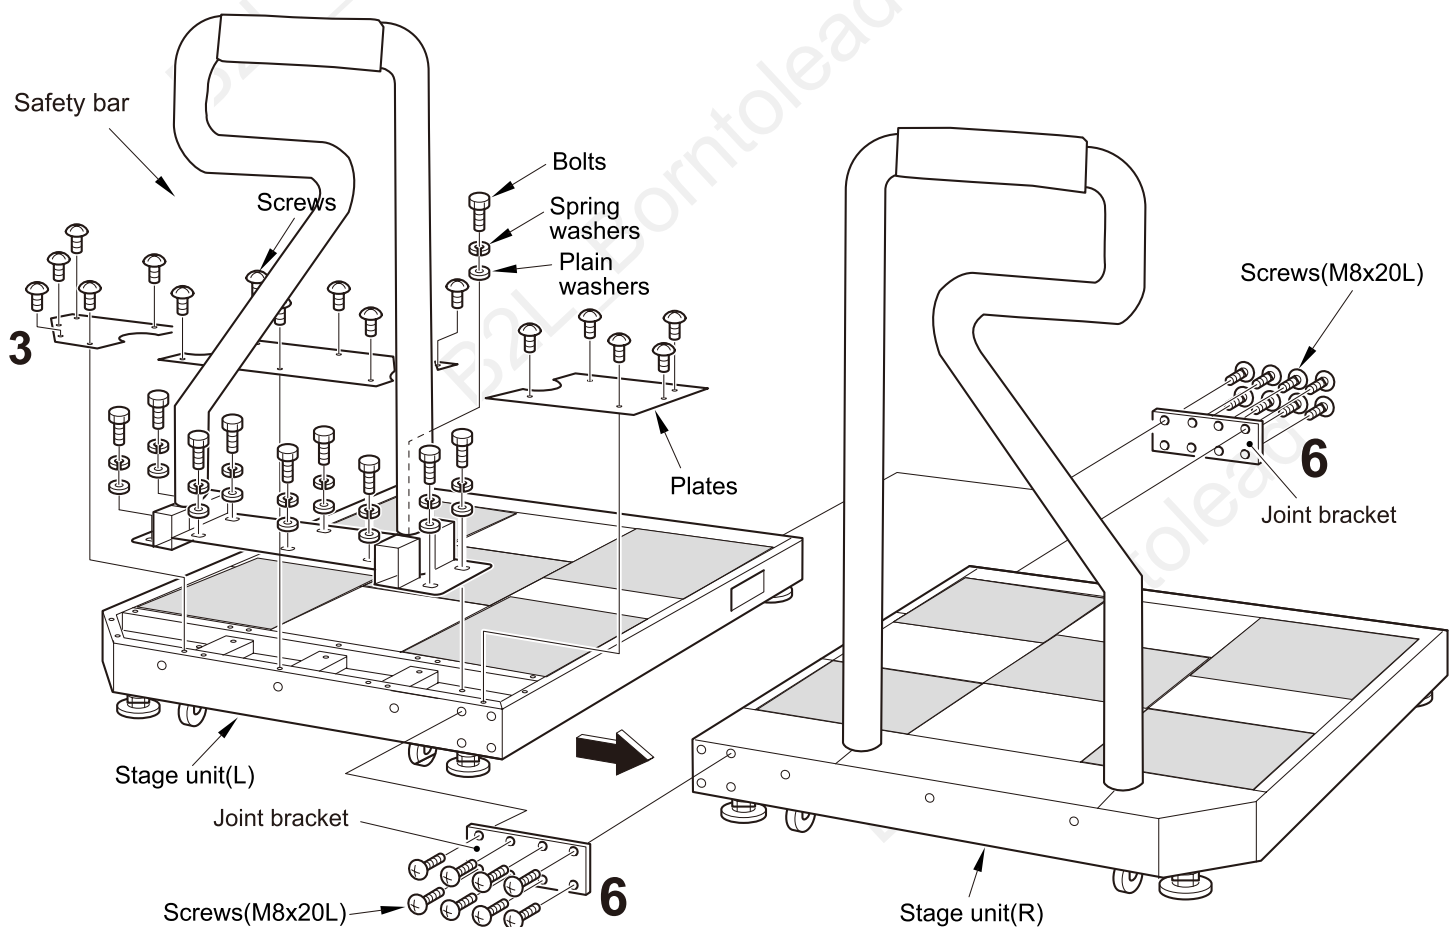- 3 Remove plates shown in the figure from the stage units.
- 4 Install the safety bar
- 5 Reinstall the plates removed in step 3 above.
- 6 Connect the right and left stage units at two points with the joint brackets



# 5 Installation and assembling

## How to connect to the PC

### Connect the USB Cable:

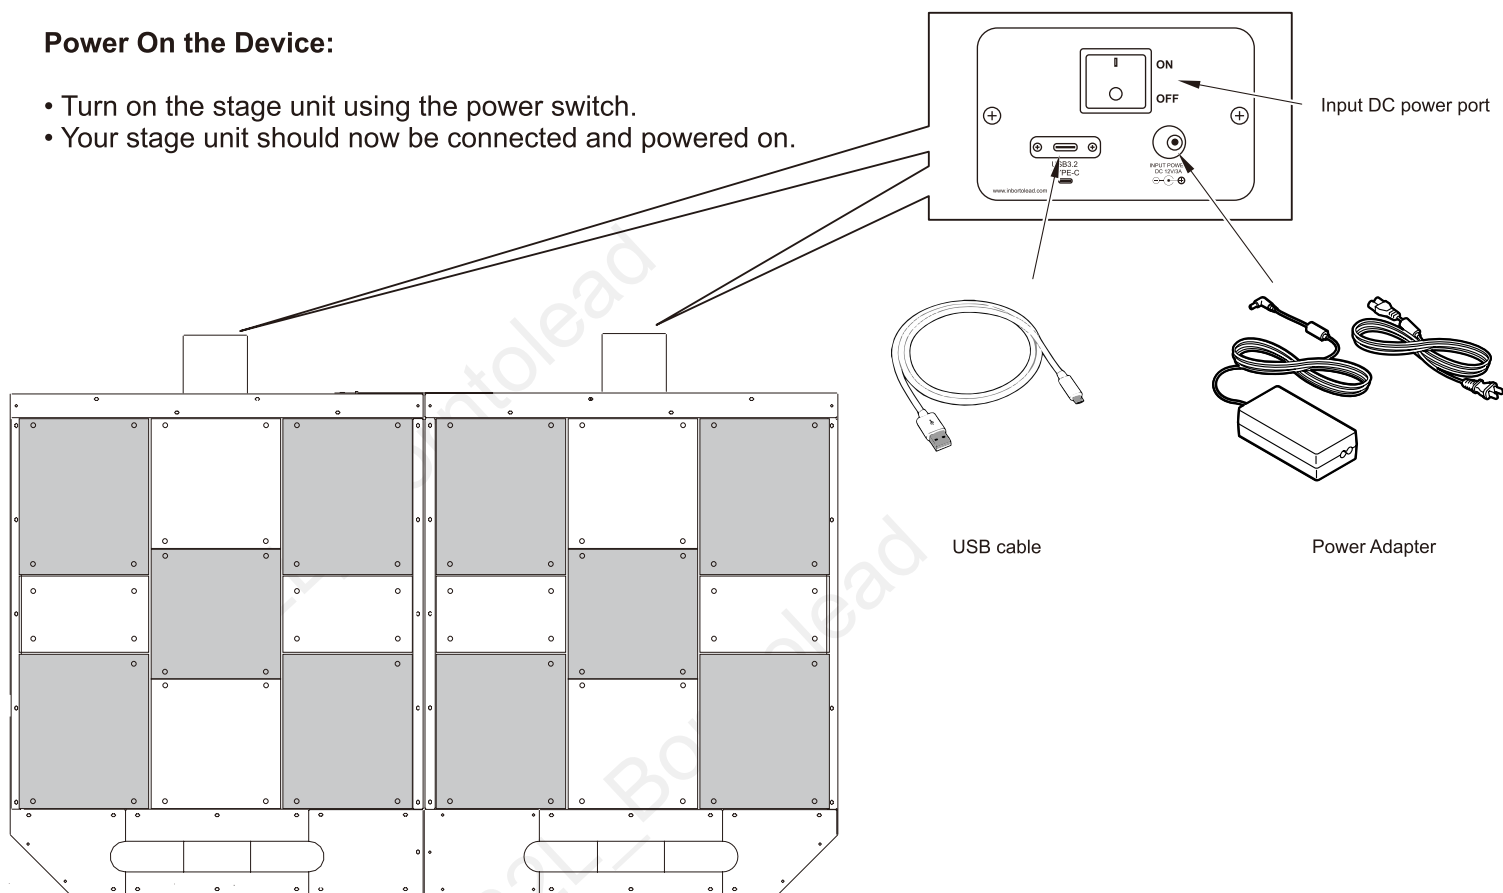
- Plug one end of the USB cable into the each stage unit.(USB Type-C)
- Connect the other end of the USB cable to your PC/LAPTOP. (USB A Standard)

### Connect the Power Adapter:

- Insert the power adapter into the each stage unit.
- Plug the power adapter into a wall outlet support (110V/220V)

### Power On the Device:

- Turn on the stage unit using the power switch.
- Your stage unit should now be connected and powered on.



## Warranty Terms and Conditions

### Warranty Period: 365 days from the date of delivery.

Our company warrants compliance with the following aftermarket terms. Please note that this warranty does not cover the accessories associated with this product.

- **Within 1-7 Days from Receipt of Delivery:** Upon receiving the product, if any issues arise, we will provide complimentary maintenance and replacement, and we will also cover the shipping costs.
- **Within 8-30 Days from Receipt of Delivery:** Provided the product is used under normal conditions, we will offer free maintenance and replacement. Shipping costs will be the responsibility of the customer.
- **Within 31-180 Days:** We will offer technical support via email and complimentary maintenance. Costs associated with replacement and shipping will be borne by the customer.
- **Within 181-360 Days:** We will provide technical support via email. Maintenance, replacement, and shipping costs will be the responsibility of the customer.
- **Beyond 360 Days:** We will only provide technical support via email. All other costs will be borne by the customer.

### Exclusions:

This warranty does not cover the following scenarios, and any services provided will be charged accordingly:

- Failure to provide an order number when requesting maintenance.
- Products purchased second-hand.
- Damage resulting from fire, earthquake, flood, public disturbances, lightning strikes, salt corrosion, or other natural disasters.
- Damage caused by dropping or impacting the product during shipment or movement.
- Damage due to incorrect connection methods or operations not in accordance with the provided guide.
- Damage resulting from operations not adhering to specified notices.
- Damage caused by unauthorized modifications.
- Please let me know if you need any further adjustments!



<https://www.facebook.com/b2l.borntolead>



[https://www.instagram.com/b2l\\_borntolead/](https://www.instagram.com/b2l_borntolead/)



[https://twitter.com/B2L\\_Borntolead](https://twitter.com/B2L_Borntolead)



[https://www.youtube.com/@b2l\\_borntolead](https://www.youtube.com/@b2l_borntolead)



[info@iborntolead.com](mailto:info@iborntolead.com)

